



Description

MPXone is an electronic controller for centralised commercial refrigeration applications in which a group of showcases needs to operate in a coordinated manner. The user terminal allows wireless connectivity with mobile devices. This is built-in on the panel-mounted models or can be purchased separately on the DIN rail models. The range includes two versions, basic and medium, which differ in terms of the number of inputs/outputs. Near Field Connection (NFC) is available as standard on both versions, while Bluetooth (BLE) is available as an option on the latter. Power supply is 24 Vac/dc for the panel-mounted models (basic and medium) and 115...230 Vac for the DIN rail models (medium). The CAREL "APPLICA" app, available on Google Play for the Android operating system and Apple store for iOS (Bluetooth only), simplifies parameter configuration and unit commissioning in the field. The operation of MPXone is described in the user manual +0300086EN, downloadable, even prior to purchase, from www.carel.com.

MODELS

P/N	Description
S1M0004W0B060	Basic panel 24V, NFC, with connectors, single pack
S1M0004W00061	Basic panel 24V, NFC, without connectors, multiple pack (20 pcs.)
S1M0006W0B070	24V panel medium, NFC, with connectors, single pack
S1M0006W00071	24V panel medium, NFC, without connectors, multiple pack (20 pcs.)
S1M0006B0B080	Medium panel 24V, NFC+BLE, with connectors, single pack
S1M0006B00081	24V panel medium, NFC+BLE, without connectors, multiple pack (20 pcs.)
S1M0007N0B110	Medium DIN, 115-230V, with connectors, single pack
S1M0007N00111	Medium DIN, 115-230V, without connectors, multiple pack (10 pcs.)


ACCESSORIES

P/N	Description
AX3000PS2002(0/1)(*)	User terminal, NFC, 4 buttons, buzzer
AX3000PS2003(0/1)(*)	User terminal, NFC+BLE, 4 buttons, buzzer
AX3000PS20X1(0/1)(*)	Remote display
ACS00CB000020	Cable for user terminal - 1.5 m long
ACS00CB000010	Cable for user terminal - 3 m long

(0/1)(*) : single/multiple pack (20 pcs.)


PANEL MODEL

Dimensions - mm (in)

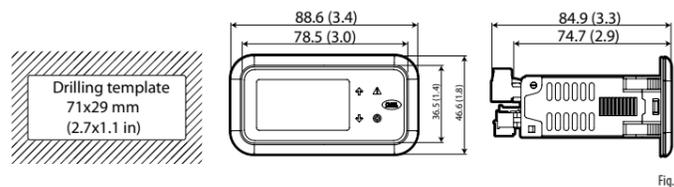


Removal

Frame Controller

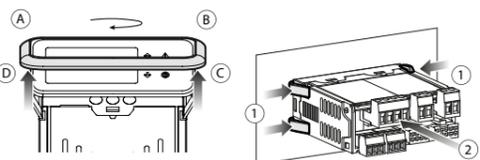


Assembly

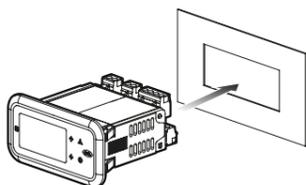


DIN RAIL MODEL



Dimensions - mm (in)

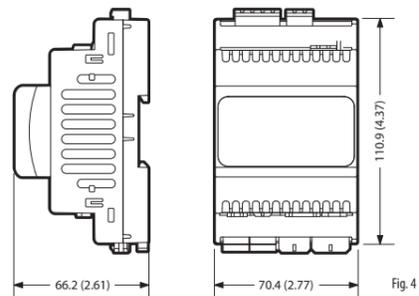


Assembly

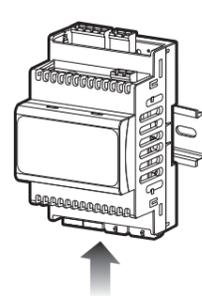


PANEL MODEL: CONNECTION DIAGRAM

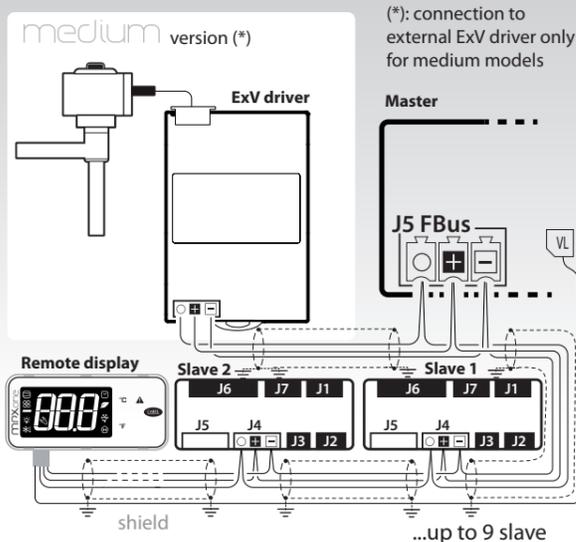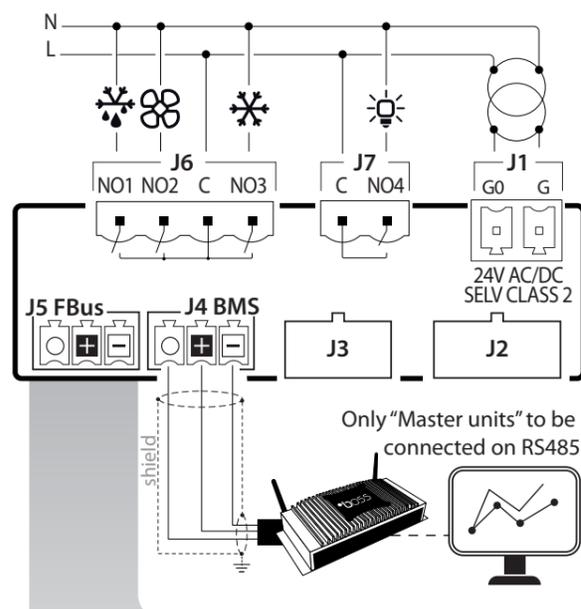

I/O connections

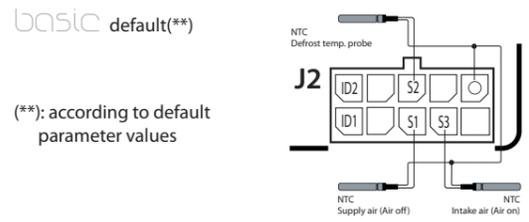


medium default

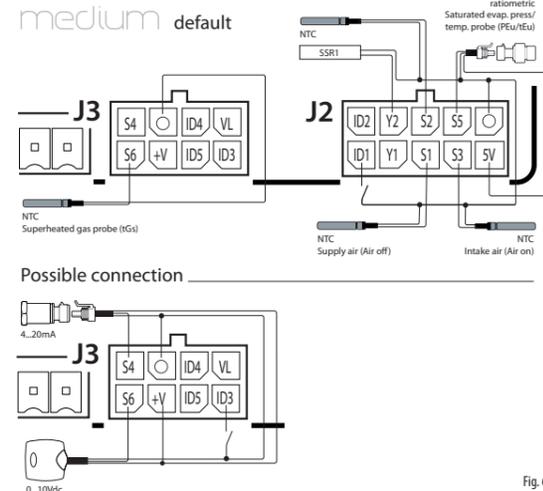

Note 1: O = GND
 Note 2: earthing G0 and G (transformer secondary) on controllers connected to the serial network will cause permanent damage to the controller.

DIN RAIL MODEL: CONNECTION DIAGRAM

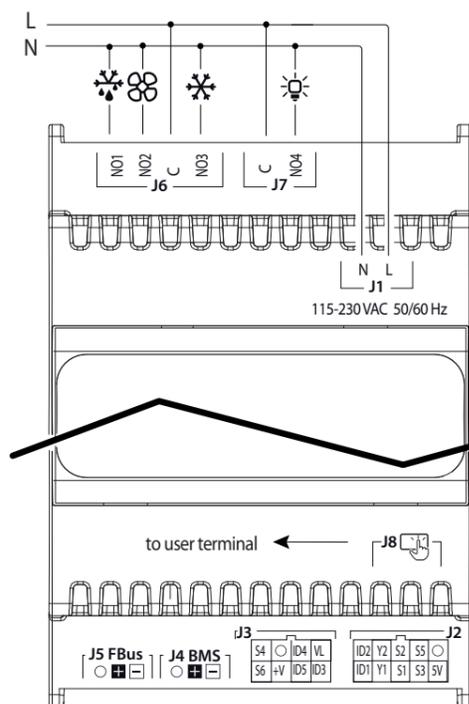


PRELIMINARY OPERATIONS

The panel version is supplied with the frame already fitted. Nonetheless, this can be easily removed without affecting the IP protection rating.

- Removing the frame** Procedure: press the frame gently upwards at point A (Fig. 2) until hearing a click and repeat the operation at the other points B, C, D so as to detach the frame.
- Assembling the frame** Repeat the removal operations in reverse order
- Ingress protection IP65 guaranteed only if:**
- maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm;
 - thickness of the electrical panel sheet metal: 0.8-2 mm;
 - maximum roughness of the surface where the gasket is applied: ≤ 120 µm.

Note: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the terminal.

USER TERMINAL

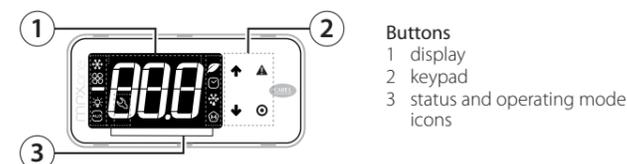

Display

Icon	Description	On	Flashing
❄️	Solenoid/compressor	Active	Timings active
🌀	Evaporator fan	Active	-
💡	Lights	On	-
🔌	Auxiliary output	Active	-
🕒	Clock	Hourly programming active	-
🌿	Energy saving	Smooth Lines function active	-
❄️	Defrost	Active	Waiting
🔧	Service	Maintenance request	-
🏠	HACCP	Active	-

Keypad

Button	Description
⬆️ ⬇️ ⬆️	<ul style="list-style-type: none"> • Increase/decrease the value • Scroll direct access functions • LED on/flashing: scroll menu, parameters, direct access functions/set parameter values
⏸️	Pressed briefly: <ul style="list-style-type: none"> • Save value and return to the parameter code • Enter direct access function menu (from main screen) and activate/deactivate functions Pressed and held (3 s): <ul style="list-style-type: none"> • Enter programming mode or return to previous level without saving • LED on: main screen/programming mode
⚠️	Pressed briefly: display alarms Pressed and held (3s): reset alarms LED on/flashing: acknowledged/active alarm

Commissioning

For further information, see the user manual (+0300086EN), available on www.carel.com under "Documentation". Before commissioning, set the initial configuration parameters, shown below and in the parameter table in the user manual, following the configuration wizard.

1. Power on the controller and wait for the display to show the first parameter (In=Type of unit, 0/1 = Slave/Master);



2. Press PRG to display the parameter value;



3. Press UP/DOWN to modify the value;



4. Press PRG to save the setting and return to the parameter code;



5. Press UP/DOWN to go to the next parameter (Sn = no. of Slaves);
6. Repeat steps 2 to 5 for all the initial configuration parameters (see the table below);



7. Press PRG to terminate the initial configuration procedure (wizard);



8. Wait for the standard display to be shown



Mobile device

The "Applica" app can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) or BLE (Bluetooth Low Energy). For further information, see the MPXone system user manual, +0300086EN

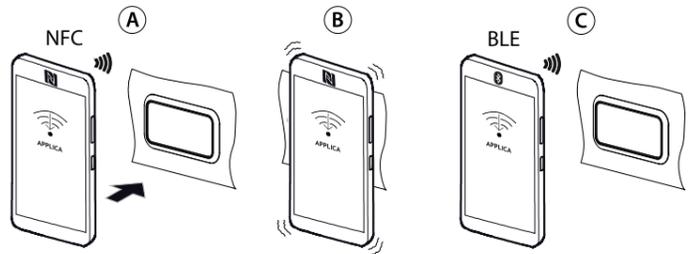


TABLE OF INITIAL CONFIGURATION PARAMETERS

Code	Description	Visibility*	Def	Min	Max	UOM
In	Type of unit: 0 = Slave - 1 = Master	B, M	0	0	1	-
Sn	Number of slaves in the local network 0 = No Slaves	B, M	0	0	9	-
H0	Serial or Master Slave network address	B, M	199	0	199	-
H3	BMS serial port protocol 0 = Carel slave - 1 = Modbus slave	B, M	1	0	1	-
/P1	Sensor type group 1 (S1, S2, S3) 0 = PT1000 Standard Range -50T150 °C 1 = NTC Standard Range -50T90 °C	M	1	0	1	-
P1	Electronic valve 0 = not present; 2 = Carel E2V valve (suction pressure probe on MPXone) 6 = Carel E2V valve (suction pressure probe on ExV driver)	M	0	0	6	-
PH	Type of refrigerant (see the table below)	M	3	0	41	-
/P2	Type of probe in Group 2 (S4, S5) 1 = NTC Standard Range -50T90 °C 2 = 0-5 V 3 = 4-20 mA	M	2	1	3	-
/P3	Type of probe in Group 3 (S6) 0 = PT1000 Standard Range -50T150 °C 1 = NTC Standard Range -50T90 °C 2 = 0-5 V 3 = 4-20mA 4 = 0-10V	M	1	0	4	-
/Fd	Assign superheated gas temperature probe (tGS) 0 = Function disabled 1 = Probe S1 2 = Probe S2 3 = Probe S3 4 = Probe S4 5 = Probe S5 6 = Probe S6 -1 = Serial probe S11 -2 = Serial probe S12 -3 = Serial probe S13 -4 = Serial probe S14	M	0	-4	6	-
/FE	Assign saturated evaporation pressure/temperature probe (PEu/tEu) See /Fd	M	0	-4	6	-
/UE	Maximum saturated evaporation pressure/temperature probe reading (PEu/tEu)	M	9.3	/LE	200	°C/°F

Code	Description	Visibility*	Def	Min	Max	UOM
/LE	Minimum saturated evaporation pressure/temperature probe reading (PEu/tEu)	M	-1	-1	/UE	°C/°F
End	End commissioning wizard					

(*): B/M = Basic/Medium

REFRIGERANT TYPE, PARAMETER PH

Val.	Desc.	Val.	Desc.	Val.	Desc.
0	Custom gas	14	R417A	28	HFO1234ze
1	R22	15	R422D	29	R455A
2	R134a	16	R413A	30	R170
3	R404A	17	R422A	31	R442A
4	R407C	18	R423A	32	R447A
5	R410A	19	R407A	33	R448A
6	R507A	20	R427A	34	R449A
7	R290	21	R245Fa	35	R450A
8	R600	22	R407F	36	R452A
9	R600a	23	R32	37	R508B
10	R717	24	HTR01	38	R452B
11	R744	25	HTR02	39	R513A
12	R728	26	R23	40	R454B
13	R1270	27	HFO1234yf	41	R458A

TECHNICAL SPECIFICATIONS

Physical specifications	Dimensions	See figures	
	Case	Polycarbonate	
	Assembly	PANEL: panel DIN: DIN rail	
	Ball pressure test temperature	125°C	
Ingress protection	IP20 (rear panel)		
	IP65 (front panel)		
	IP00 (DIN model)		
Front cleaning (panel)	Use soft, non-abrasive cloth and neutral detergent or water		
Environmental conditions	Operating temperature	-20T60 °C, <90% RH non-condensing	
	Storage temperature	-40T85 °C, <90% RH non-condensing	
Electrical characteristics	Rated power supply voltage	Panel: 24 Vac/dc, supplied by SELV or PELV class 2 power supply DIN: 115-230Vac	
	Operating power supply voltage	Panel: 24 Vac/dc, +10% -15% DIN: 115-230Vac, +10% -15%	
	Input frequency	50/60Hz	
	Maximum current draw	PANEL: 600 mArms DIN: 150 mArms	
	Min power consumption	400mW	
	Clock	precision:	+50ppm;
		date/time retention after shutdown	Basic: 72 hours Medium: 6 months
	Software class and structure	A	
	Environmental pollution class	3	
	Class of protection against electric shock	To be incorporated in class I or II appliances	
Type of action and disconnection	1.C		
Rated impulse voltage	115-230V input and relay output: 4kV; 24 V input: 0.5 kV		
Surge immunity category	115-230V input and relay outputs: III 24 V input: II		
Control device construction	Device to be incorporated		
Terminal block	Plug-in male-female. Cable size: see user manual		
Purpose of the controller	Electrical operating control		
User interface	Buzzer	PANEL: integrated DIN: not included in the controller, integrated into the user terminal	
	Display	3 digits, decimal point and icons multifunctional	

Connectivity	NFC	Max distance 10 mm, variable according to the mobile device used
	Bluetooth Low Energy	Max distance 10 m, variable according to the mobile device used
	BMS serial interface	Modbus over RS485, not opto-isolated
	FieldBUS serial interface	Modbus over RS485, not opto-isolated, maximum number of devices that can be connected: 20
HMI interface	Modbus over RS485, not opto-isolated	
Analogue inputs (Lmax=10m)	S1, S2, S3: NTC / PT1000	NTC: resolution 0.1 °C; 10kΩ@25°C; error: ±1°C in the range -50T50°C, ±3°C in the range 50T90°C
	S4, S5: 0-5V rat / 4-20 mA / NTC S6: NTC / PT1000 / 0-5 Vrat / 0-10 V / 4-20 mA	PT1000: resolution 0.1 °C; 1kΩ@0°C; error: ±1°C in the range -60+120°C 0-5 Vrat: error 2% fs, typical 1% 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1%
Digital inputs	ID1, ID2, ID3, ID4, ID5	Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω
Analogue outputs	Y1, Y2	0-10V: 10 mA max PWM 100 Hz: max amplitude 10V: 10 mA max
Digital outputs	NO1 (16A), NO2 (8A), NO3 (5A), NO4 (5A)	16 A: Panel: EN60730: 15A resistive, 250 V, 100k cycles; UL60730: 15 A resistive, 240 Vac, 100k cycles; Pilot duty B300, 6k cycles DIN: EN60730: 10A resistive, 250 V, 100k cycles; UL60730: 10A resistive, 240Vac, 100k cycles; 10FLA, 60LRA, 250Vac; Pilot duty B300, 6k cycles 8A: EN60730: 5 A resistive, 250 Vac, 100k cycles; 5(4), 250Vac, 100k cycles; 4(2), 250Vac, 100k cycles UL60730: 10 A resistive, 250 Vac, 100k cycles; 2 FLA, 12 LRA, 250 Vac, 30k cycles 5A: EN60730: 5 A resistive, 250 Vac, 50k cycles; 4(1), 230 Vac, 100k cycles; 3 (1), 230 Vac, 100k cycles UL60730: 5 A resistive, 250 Vac, 30k cycles; 1 FLA, 6 LRA, 250 Vac, 30k cycles; Pilot Duty C300, 30k cycles
	Note: NO1+NO2+NO3 cannot exceed 15A max.	
Probes and terminal power supply	5V	5 Vdc ± 2% to power the 0 to 5 V ratiometric probes. Maximum current delivered: 35 mA protected against short-circuits
	+V	8-11V to power the 4-20 mA current probes. Maximum current delivered: 80mA protected against short-circuits
	VL	13 Vdc ± 10% to power the remote display
	HMI power supply	13 Vdc ± 10% to power the user terminal
Cable lengths	Analogue inputs/ outputs, digital inputs/ outputs, probe power	<10m (*) (**) (*) in the panel version, if using the VL power supply in household environments, the maximum cable length is 2 m. (**) in the DIN version powered at 115 Vac, if using +V in household environments, the maximum cable length is 2 m.
	BMS and Fieldbus serial cables	<500m with shielded cable
Conformity	Electrical safety	EN/UL 60730-1, EN/UL 60335-1
	Electromagnetic compatibility	EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4, EAC
	Applications with flammable refrigerant gases	EN/UL 60079-15, EN/UL 60335-2-34,
	Wireless conformity	EN/UL 60335-2-40, EN/UL 60335-2-89 RED, FCC, IC

ALARM TABLE

When an alarm occurs, the ALARM button turns red and the user terminal displays the corresponding alarm code.

Code	Description	Code	Description
rE	Control probe	Etc	Real time clock not updated
E1	Probe S1 fault	LSH	Low superheat
E2	Probe S2 fault	LSA	Low suction temperature
E3	Probe S3 fault	MOP	Max evaporation pressure
E4	Probe S4 fault	LOP	Low evaporation pressure
E5	Probe S5 fault	bLo	Valve blocked
E6	Probe S6 fault	Edc	Communication error with stepper driver
E11	Serial probe S11 not updated	dA1	EVD ice/mini: probe S1 fault
E12	Serial probe S12 not updated	dA2	EVD ice/mini: probe S1 fault
E13	Serial probe S13 not updated	AFr	EVD ice/mini: firmware <1.7
E14	Serial probe S14 not updated	HA	HACCP type HA
LO	Low temperature	HF	HACCP type HF
HI	High temperature	MA	Communication error with the Master (only on Slave)
LO2	Low temperature	u1...u9	Communication error with the Slave (only on Master)
HI2	High temperature	n1...n9	Alarm on unit 1 ... 9 in the network
IA	Immediate alarm from external contact	GPE	Error in the custom gas parameters
dA	Delayed alarm from external contact	GHI	Generic function: MAX threshold exceeded alarm
dor	Door open for too long	GLO	Generic function: MIN threshold exceeded alarm

IMPORTANT WARNINGS



The CAREL product is a state-of-the-art product, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website www.carel.com. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. Failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. The customer must only use the product in the manner described in the documentation relating to the product. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website www.CAREL.com and/or by specific agreements with customers.



IMPORTANT: Separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and signal cables in the same conduits.



Disposal of the product
The appliance (or the product) must be disposed of separately in compliance with the local standards in force on waste disposal.



The complete user manual (+0300086EN) for the product can be downloaded at www.carel.com under the "Services / Documentation" section or via QR Code.